


## Solenoids for Mod. U70/ / U7\*EX / G70 (EN 175301-803 Form B Industrial)

The U7\* series of solenoid coils complies with both standards UL and CSA, and the marking we will apply on the solenoids is cURus (standards UL 429 and CSA 22.2 n. 139).

The U7\* coil series is also available in an ATEX explosion rated version. Mod. U7\*EX is marked II 3 GD Eex nA T4. NOTE: to order the ATEX version of hte U7\* coil it is necessary to add the EX suffix at the end of the code.





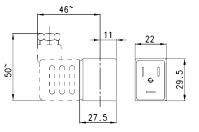

Solenoid Voltages U70 (UL and CSA approved)

Mod.			Mod.				
	24V	50/60 Hz	3,5VA		24V	DC	3,1W
U7H	12V	DC	3,1W	U77	48V	50/60 Hz	3,5VA
U7K	110V	AC 50/60 Hz	4,3VA				
	125V	AC 50/60 Hz	5,5VA				

 
 Protection class:
 IP54 - DIN 40050 IP65 (with connector Mod. 122-800)

 Insulation:
 Class H (180°C)

 Connections:
 Bipolar plus earth DIN 43650 (version B)

 Voltage tolerance:
 AC +10% - 15% DC ±10%

 Continuous operation:
 ED 100%


 Protection:
 U70 PET G70 Nylon

22x22

Nominal dimensions:

Dimensions in millimeters (mm)

## MANUAL OVERRIDE

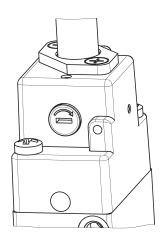

GENERAL DATA				
Construction	spool - type			
Valve group	2x3/2 - 3/2 - 5/2 - 5/3-way CC CO CP			
Materials	AL body, stainless steel spool, NBR seals			
Ports	G1/8 - G1/4			
Installation	in any position			
Operating temperature	0 ÷ 60°C (with dry air at -20°C)			
Operating pressure	see tables			
Fluid	filtered air, without lubrication. If lubricated air is used, it is recommended to use ISOVG32 oil. Once applied the lubrication should never be interrupted.			

Example of solenoid valve with a bistable standard manual override.

CODI	NG EXAMPLE					
3	3 8 D - 015 - 02 - U7 7					
3	SERIES					
3	NUMBER OF WAYS - POSITIONS: 3 = 3/2 NC 4 = 3/2 NO 5 = 5/2 6 = 5/3 CC 7 = 5/3 CO 8 = 5/3 CP 9 = 1x3/2 NC + 1x3/2 NO					
8	PORTS: 8 = G1/8 4 = G1/4					
D	VERSION: = standard D = double valve 2x3/2 L = for manifold assembly (only for solenoid valves 3/2 with G1/8 ports)					
015	ACTUATION: 011 = double solenoid 015 = single solenoid, spring return 016 = single solenoid external servo-command E11 = double solenoid external servo-command E15 = single solenoid, external servo-command 033 = pneumatic preumatic 035 = pneumatic spring					
22	SOLENOID INTERFACE: 02 = mech. sol. 22 x 22					
U7	ENCAPSULATING MATERIAL / SOLENOID DIMENSIONS: A8 = PPS / 30 × 30 G7 = PA / 22 × 22 G8 = PA / 30 × 30 (24 V DC only) G9 = PA / 22 × 58 H8 = PA 6 V0 / 30 × 30 U7 = PET / 22 × 22					
7	SOLENOID VOLTAGE: see the solenoids section from page 2.2.35.01					
	TYPE OF MANUAL OVERRIDE: = bistable, standard IL = bistable, lever type (available on demand) IM = monostable (available on demand)					