#### ORDERING INFORMATION:

The following is a listing of valve sections available from stock on a standard basis. STANDARD SECTIONS AVAILABLE:

# **INLET SECTIONS** ALL HAVE BOTH TOP AND SIDE INLET PORTS

PART NO.	RELIEF TYPE AND SETTING	PORT SIZE
SVI21	No Relief	#10 SAE ORB (7/8-14 THD)
SVI24	Adjustable Low Pressure Relief Set at 1000 PSI	#10 SAE ORB (7/8-14 THD)
SVI15	Adjustable High Pressure Relief Set At 2000 PSI	#8 SAE ORB (3/4-16 THD)
SVI25	Adjustable High Pressure Relief Set at 2000 PSI	#10 SAE ORB (7/8-14 THD)

## WORK SECTIONS ALL HAVE #8 SAE ORB (3/4-16 THD) PORTS, LOAD CHECK AND STANDARD LEVER HANDLE

PART NO.	SPOOL TYPE AND ACTION
SVW1AA1	3-Way Single Acting w/ Spring Center
SVW1BA1	4-Way Double Acting w/ Spring Center (Work Ports Blocked in Neutral)
SVW1BB1	4-Way Double Acting w/ 3 Position Detent (Work Ports Blocked in Neutral)
SVW1CA1	4-Way Motor Spool w/ Spring Center (Work Ports Open to Tank in Neutral
SVW1CB1	4-Way Motor Spool w/ 3 Position Detent (Work Ports Open to Tank in Neutral)
SVW1DD1	4-Way 4 Position Float w/ Spring Center and Float Detent
SVL1CA1	4-Way Spool w/ Spring Center (with Pilot Operated Checks on Both Work Ports)
SVM1ES1	4-Way Meter Spool w/ Spring Center (Work Ports Blocked in Neutral)

### PORT RELIEF WORK SECTIONS ALL HAVE #8 SAE ORB (3/4-16 THD) PORTS, LOAD CHECK AND STANDARD LEVER HANDLE. MODELS WITH RELIEF FACTORY SET AT 2000 PSI AT 3 GPM.

SPOOL TYPE AND ACTION	PORT RELIEFS
4-Way Double Acting w/ Spring Center	Port Relief Plugged
4-Way Double Acting w/ Spring Center	Adjustable 1500-3000 PSI
4-Way 4 Position Float w/ Spring Center and Float Detent	Port Relief Plugged
4-Way 4 Position Float w/ Spring Center and Float Detent	Shim Adjustable 1500-3000 PSI
4-Way Meter Spool w/ Spring Center	Port Relief Plugged
4-Way Meter Spool w/ Spring Center	Adjustable 1500-3000 PSI
4-Way Double Acting Series w/ Spring Center	Adjustable 1500-3000 PSI
4-Way Double Acting Series w/ Spring Center	Port Relief Plugged
	4-Way Double Acting w/ Spring Center 4-Way Double Acting w/ Spring Center 4-Way 4 Position Float w/ Spring Center and Float Detent 4-Way 4 Position Float w/ Spring Center and Float Detent 4-Way Meter Spool w/ Spring Center 4-Way Meter Spool w/ Spring Center 4-Way Double Acting Series w/ Spring Center

# **OUTLET SECTIONS** ALL HAVE BOTH TOP AND SIDE OUTLET PORTS

PART NO.	EXHAUST OPTIONS	PORT SIZE
SVE11	Open Center Outlet w/ Conversion Plug	#8 SAE ORB (3/4-16 THD)
SVE21	Open Center Outlet w/ Conversion Plug	#10 SAE ORB (7/8-14 THD)
SVE22	Power Beyond Outlet w/ #8 SAE Beyond Port	#10 SAE ORB (7/8-14 THD)
SVE23	Closed Center Outlet	#10 SAE ORB (7/8-14 THD)
SVE26	Open Center Outlet Pressure Build-up Valve	#10 SAE ORB (7/8-14 THD)
SVE27	Power Beyond Pressure Build-up Valve	#10 SAE ORB (7/8-14 THD)
TIE ROD KI	TS PART NO.	PART NO.
TIE DOD TODO	660401001 1 Cootion*	660401006 6 Sections*


### TIE ROD TORQUE 150in-lbs ± 6in-lbs (12 1/2 ft-lbs ±1/2)

660401002 2 Sections\* 660401003 3 Sections\* 660401004 4 Sections\* 660401005 5 Sections\* \*Number of Work Sections 660401007 7 Sections\* 660401008 8 Sections\* 660401009 9 Sections\* 660401010 10 Sections\*

DODE OIZE

## SPECIAL INLET AND OUTLET SECTIONS AVAILABLE:

Sections other than standard models listed can be made to order. Use order code Matrix below to generate a model number that meets your requirements. If you prefer, contact your Sales Representative with your specific requirements and a model number will be assigned for you. This model number can be used for future orders. A minimum order quantity will apply to special valves. Please consult Sales Representative.

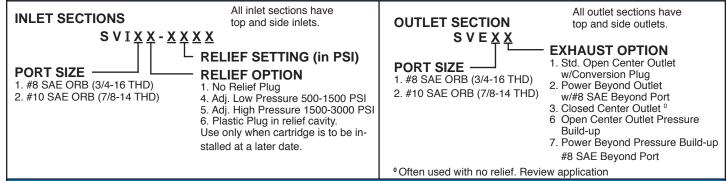

### **VALVE ASSEMBLIES**

The Model SV sectional body directional control valve can be ordered as separate sections or as a complete factory tested assembly. This will need to be specified with each order. An assembly number will be assigned at the time of the order. This assembly number can then be used for future orders.

#### ASSEMBLY MODEL NUMBER SVA-XXXX-

XXXX = Sequence of Numbers. This number will be assigned to final valve to be assembled and tested at the factory. Each new order or quote willbe assigned a new assembly model number. Please use quotation sheet at the end of SV section.