
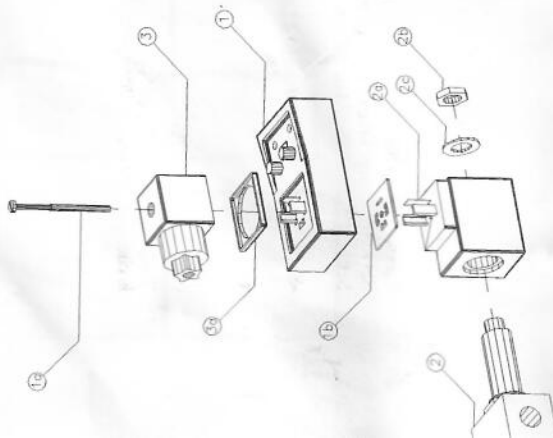


CAUTION !!!
When using DC (Direct current),
the positive pole (+) should be
connected to connector 1.

Figure 2.

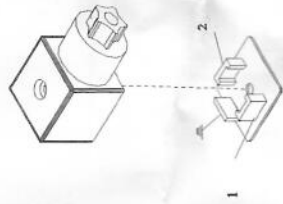

Item	Qty	Description
3A	1	Gasket
3	1	Connector
2C	1	Washer
2B	1	Nut
2A	1	Coil
2	1	Solenoid Valve
1B	1	Gasket
1A	1	Screw
1	1	Norgren Timer

Put the protection cap back into place and reconnect the connector to the timer and tighten the screw.

Setting the timer

Set the interval time (T2) with the right button.
Set the discharge time (T1) with the left button.
Setting the times should be done as follows:

-Set T1 to 2 seconds and T2 to 20 minutes and adjust from there as necessary.

Service & Maintenance

The electronic drain valve is maintenance free. However, we recommend replacing wearing valve parts every two years. You can obtain service kits from your dealer.
We also recommend you test the electronic drain valve every time the compressed air system is checked, by pressing the TEST-switch on the timer.

Installation & Maintenance Instructions For The Electronic Drain Valve

